


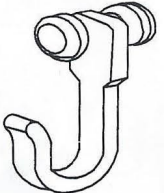
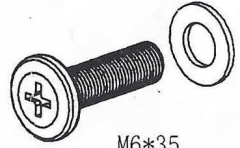
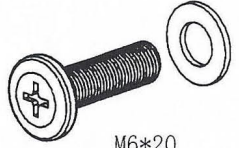
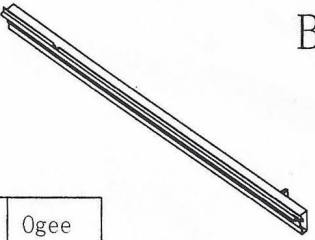
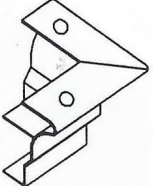
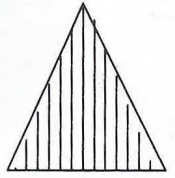

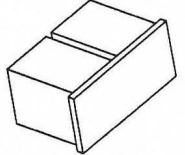
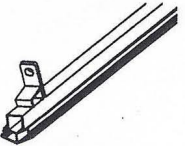

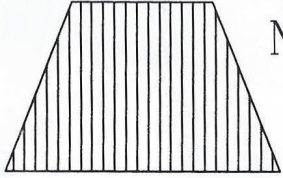
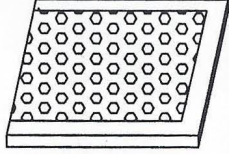


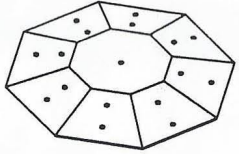
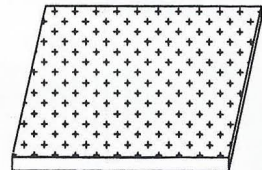


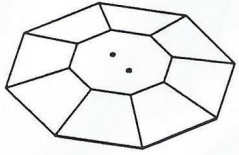



KGG1028

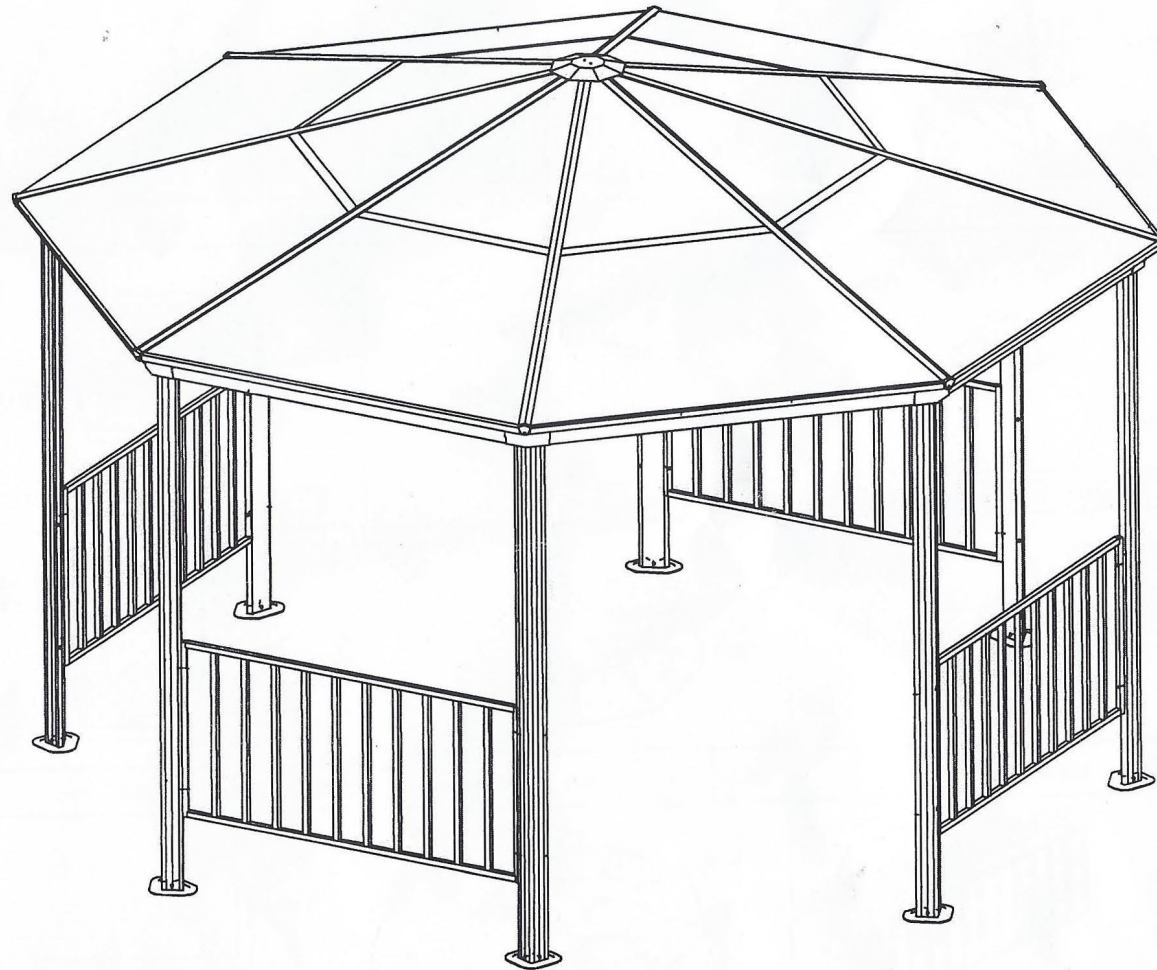



 <p>A</p> <p>8PCS Column</p>	 <p>G</p> <p>8PCS Base</p>	 <p>L</p> <p>96PCS Hook</p>	 <p>V</p> <p>17 PCS Screws</p> <p>M6*35</p>	 <p>R</p> <p>136 PCS Screws</p> <p>M6*20</p>
 <p>B</p> <p>8PCS Ogee</p>	 <p>H</p> <p>8PCS Coner cover</p>	 <p>M</p> <p>8PCS Roof Panel</p>	 <p>S</p> <p>16PCS Screws</p> <p>M5*16</p>	 <p>F</p> <p>16 PCS Pulg</p>
 <p>C</p> <p>8PCS Roof pole</p>	 <p>O</p> <p>8PCS Corner finishing ends</p>	 <p>N</p> <p>8PCS Roof Panel</p>	 <p>T1</p> <p>8PCS Inside mosquito net</p>	
 <p>D</p> <p>8PCS Roof finishing side bar</p>	 <p>J</p> <p>16PCS solidifying bar</p>	 <p>Q1</p> <p>1PCS Inside roof connector</p>	 <p>T2</p> <p>8PCS outside mosquito net</p>	
 <p>E</p> <p>8PCS Roof support bar</p>	 <p>K</p> <p>4PCS Rail</p>	 <p>Q2</p> <p>1PCS Outside roof connector</p>	 <p>U</p> <p>24PCS Camp nail</p>	

Step 1


Assemble columns

Step 2




Assemble the ogees

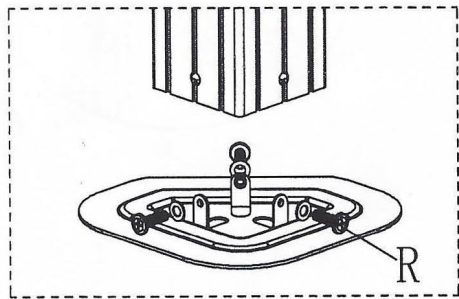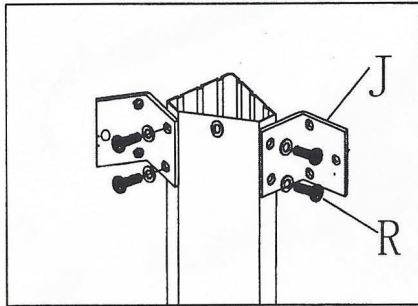

- Install columns(A) on bases (G) using screws(R)

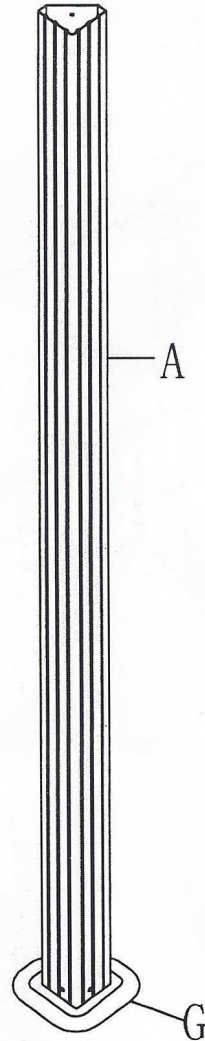


- Slide 6 hooks (L) into each rail of ogees (B).

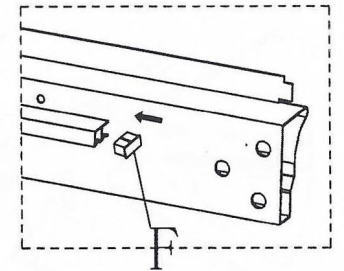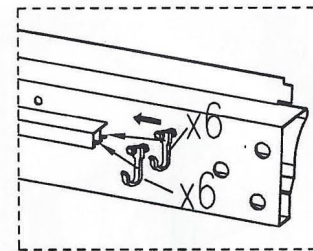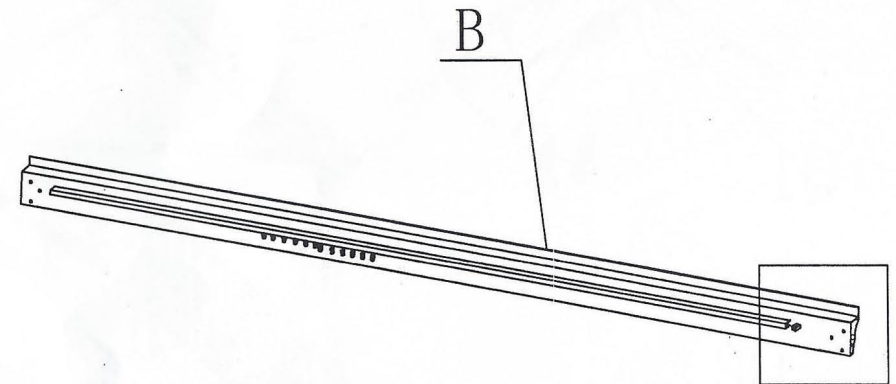


Step 3

Assemble the structure

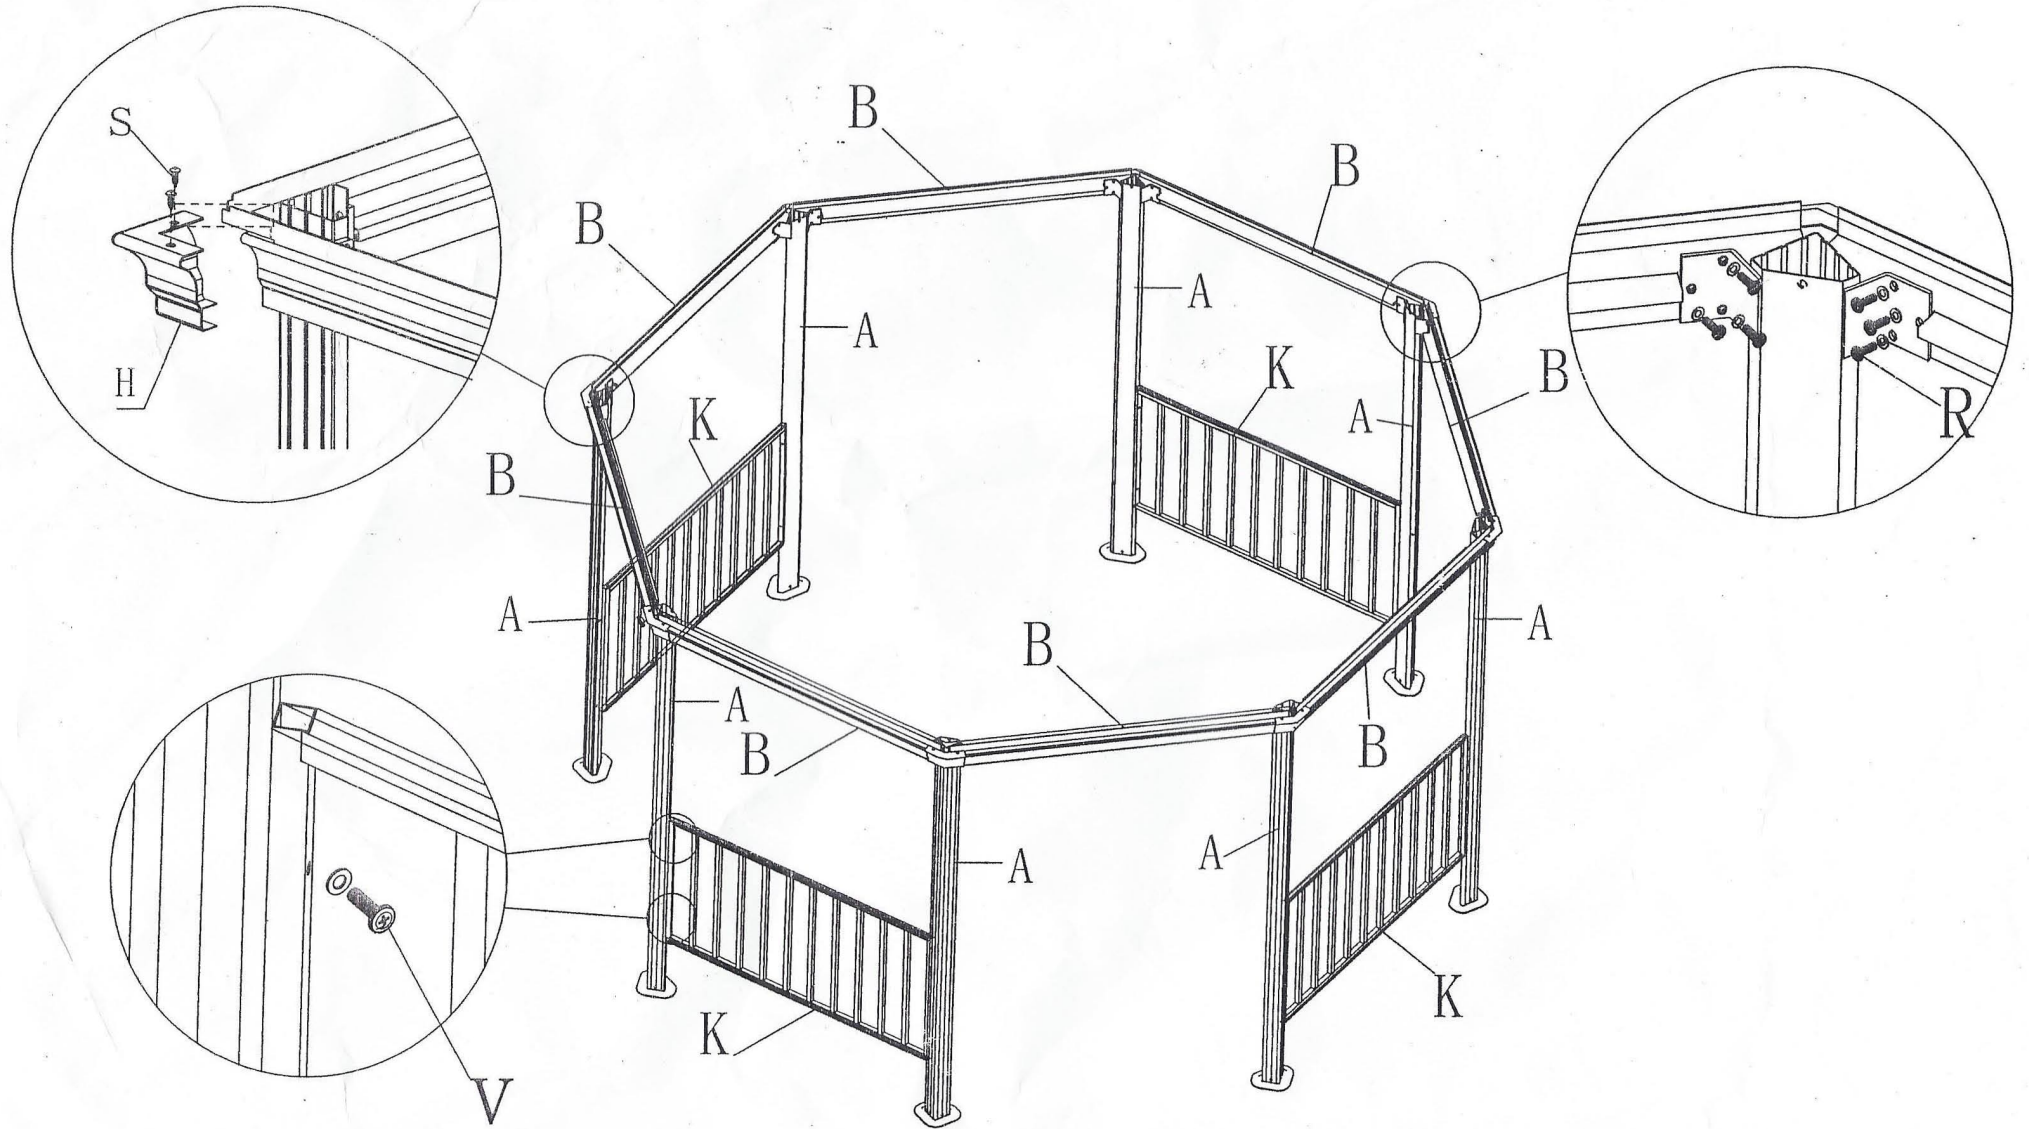



Step 4

Assemble the structure

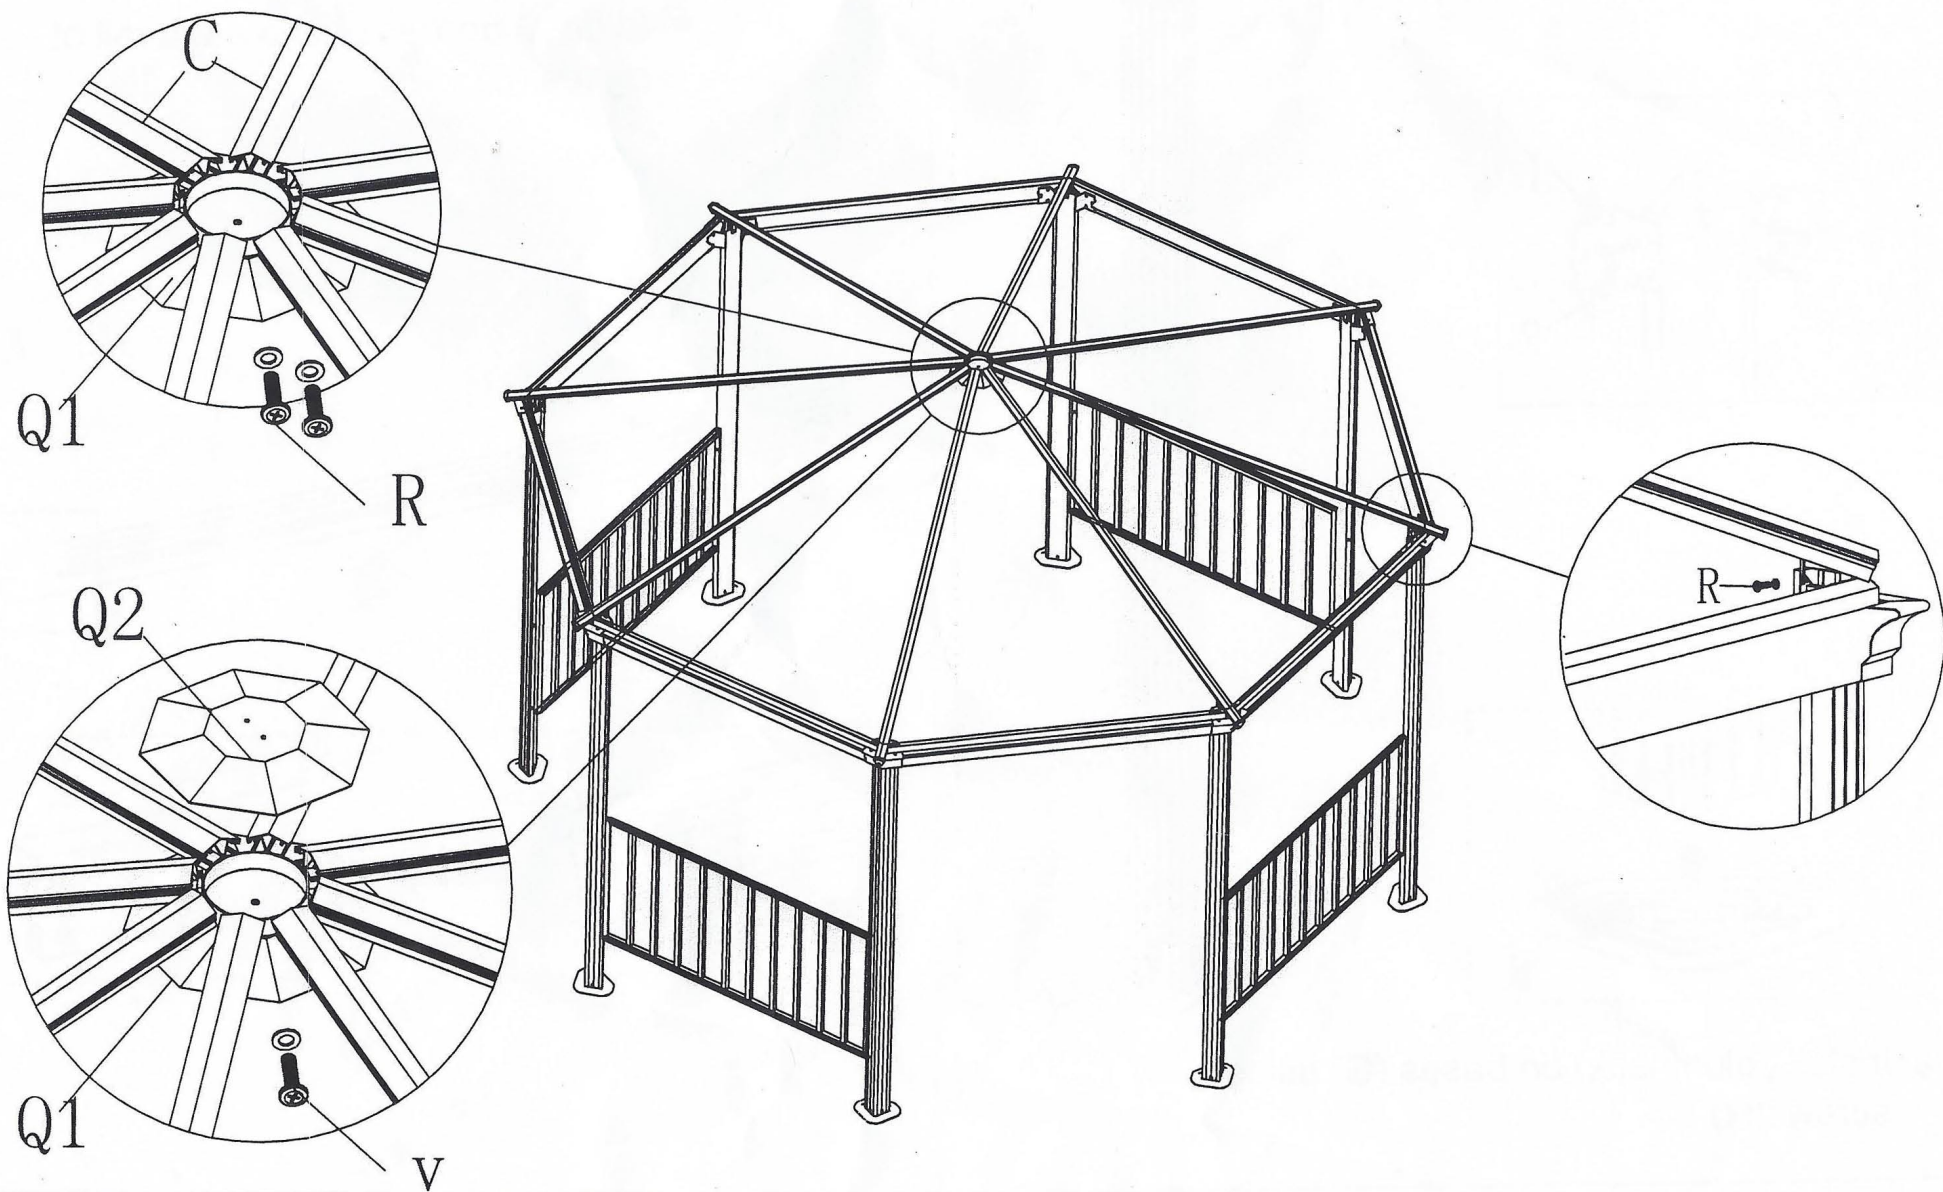


Step 5

Assemble the structure

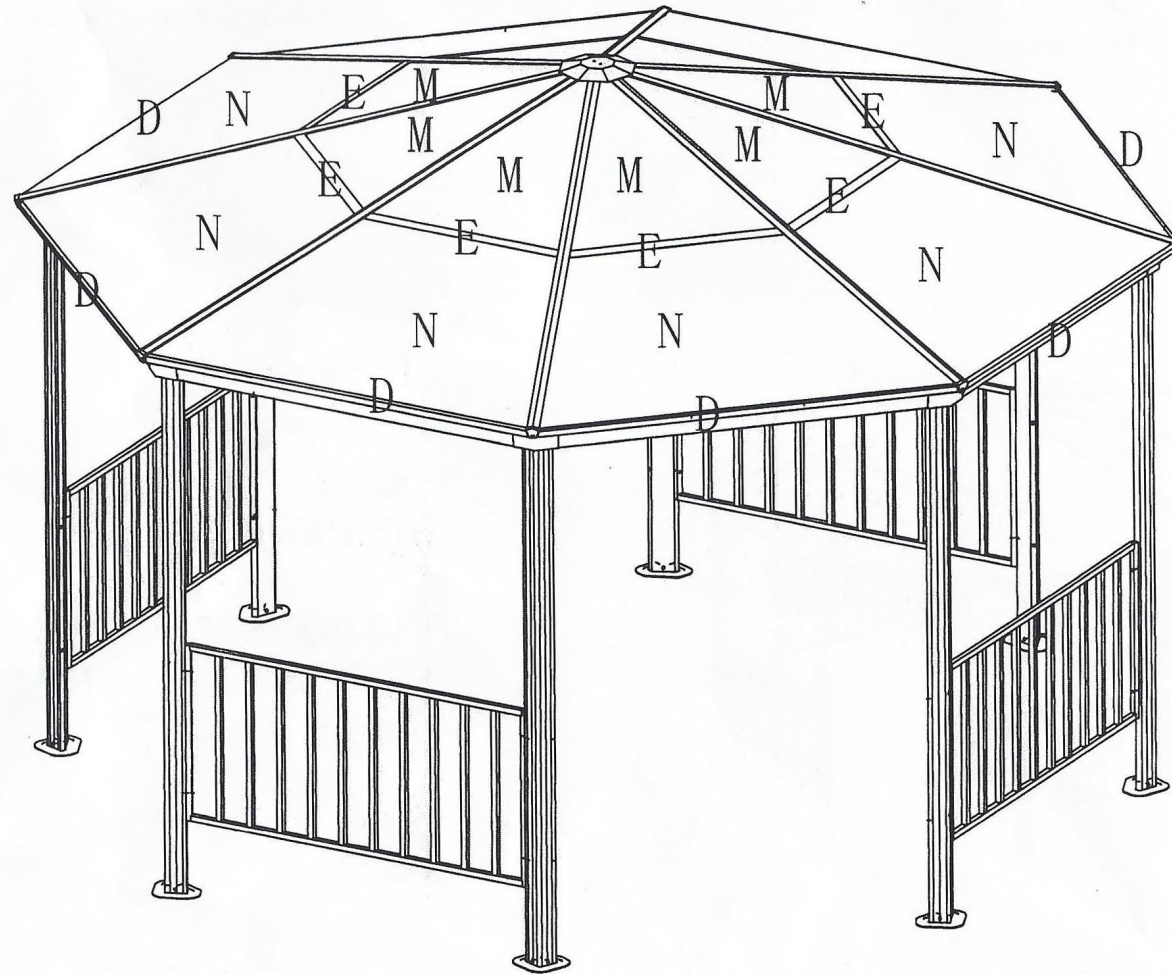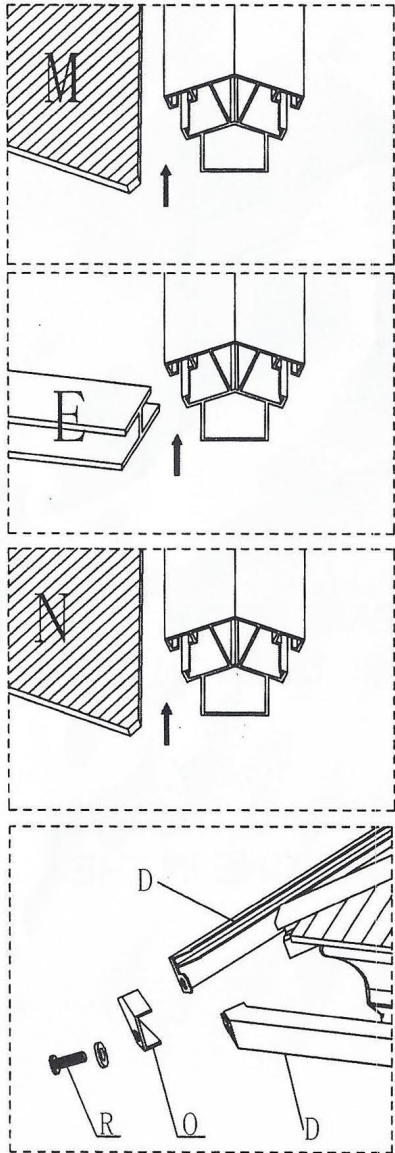

Step 6 Final assembly

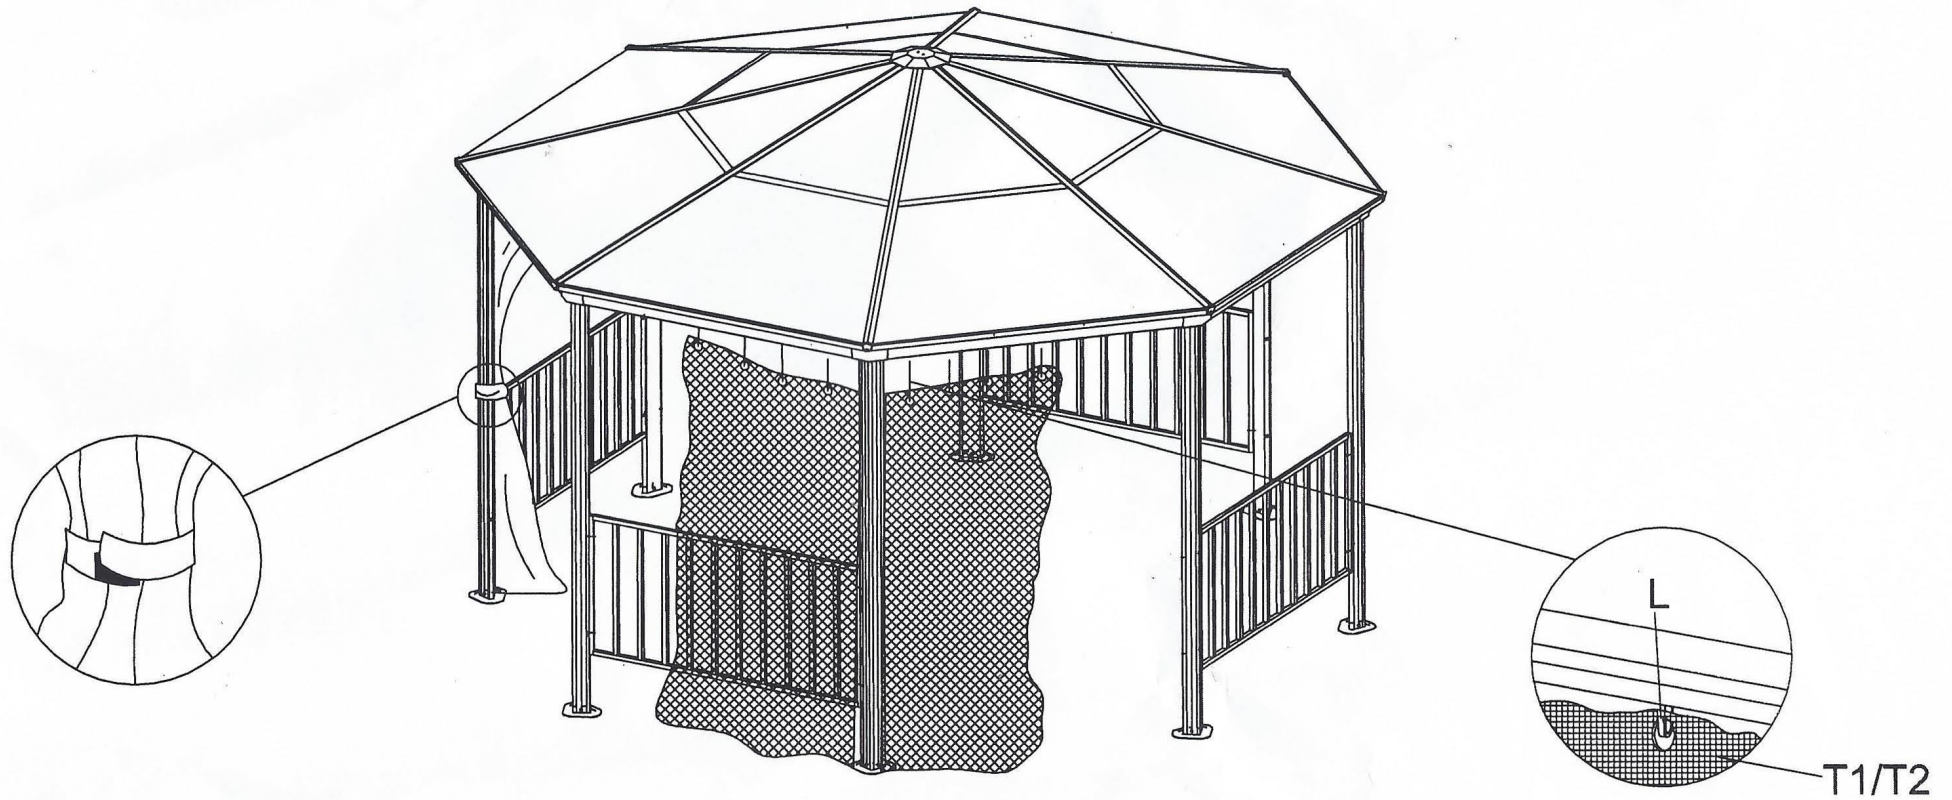


- Install the mosquito netting (T1/T2) along the tracks on the hooks (L).
- Place metal hook into small hole in the middle of the column


Attention

You **MUST** anchor the sun shelter before installing the roof:
Make sure to level the platform (floor) properly before.
Make sure that the shelter is square before anchoring.

Grass surface: Use camp nails (R) to anchor (included)(NOTE: This is a temporary solution)
Wood deck: Use wood screws to anchor (not included)
Concrete patio: Use Tapcon screws to anchor (not included)

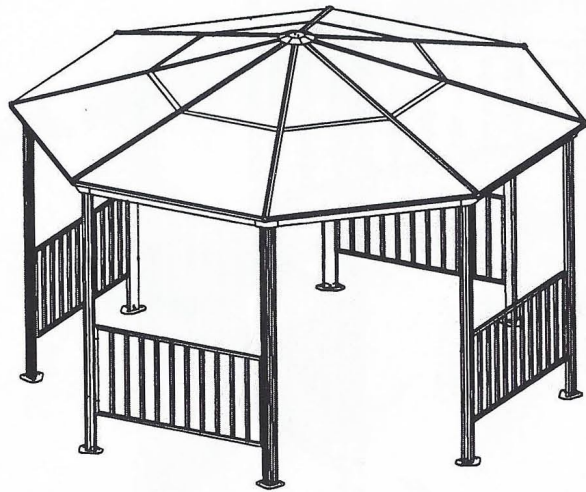

Warning

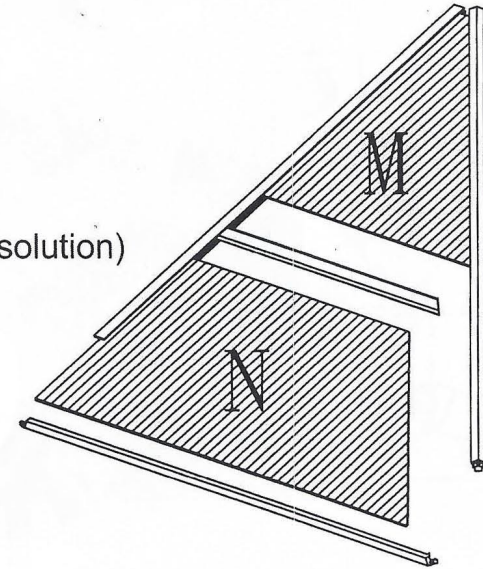

IT IS IMPORTANT TO PLACE THE PANELS THE PROPER WAY SO THAT THE UV PROTECTION IS ON THE EXTERIOR.

IT IS IMPORTANT THAT THE PANELS AND THE ROOF SUPPORT BARS ARE WELL IN PLACE, ONE IN THE OTHER.